

KitchenAid

7 SPEED CORDLESS HAND MIXER

5KHMR700A, 5KHMR762A

OWNER'S MANUAL

PRODUCT SAFETY

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1.** Read all instructions. Misuse of appliance may result in personal injury.
- 2.** To protect against risk of electrical shock, do not put the Motor Body of Cordless Hand Mixer, USB Adapter, Battery, or USB Cable in water or other liquid.
- 3.** This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge.
- 4.** Children should be supervised to ensure that they do not play with the appliance.
- 5.** Turn the appliance off, before assembling or disassembling parts and before cleaning. To unplug the adapter, grasp the adapter and pull from the power source. Never pull from the power cord.
- 6.** Do not use an extension cord. Plug adapter directly into an electric outlet.
- 7.** Do not modify or attempt to repair the appliance or the Battery.
- 8.** Do not incinerate this appliance even if it is severely damaged. The batteries can explode in a fire.
- 9.** Avoid contacting moving parts. Keep hands, hair clothing, as well as spatulas and other utensils away from beaters and accessories during operation to reduce the risk of injury to persons or damage to the Cordless Hand Mixer.
- 10.** Do not operate any appliance or USB Adapter with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorised Service Centre for examination, repair or adjustment.
- 11.** The use of accessories/attachments not recommended or sold by KitchenAid may cause fire, electric shock, or injury to persons.
- 12.** Do not let cord hang over edge of table or counter.
- 13.** Never leave the appliance unattended while it is in operation.
- 14.** Do not let cord contact hot surface, including the stove.

- 15.** Remove beaters or accessories from the Cordless Hand Mixer before washing.
- 16.** Refer to the “Care and Cleaning” section for instructions on cleaning the surfaces in contact with food.
- 17.** Disconnect the Battery from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
- 18.** Prevent unintentional starting. Ensure the switch is in the off-position before connecting to the Battery, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch ON invites accidents.
- 19.** Recharge only with the adapter specified by the manufacturer. The adapter that is suitable for one type of Battery may create a risk of fire when used with another Battery.
- 20.** Use appliances only with KitchenAid 12 V Battery. Use of any other Batteries may create a risk of injury and fire.
- 21.** When the Battery is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the Battery terminals together may cause burns or a fire.
- 22.** Under abusive conditions, liquid may be ejected from the Battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the Battery may cause irritation or burns.
- 23.** Do not use a Battery or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
- 24.** Do not expose a Battery or appliance to fire or excessive temperature. Exposure to fire or temperature above 129°C may cause explosion.
- 25.** Follow all charging instructions and do not charge the Battery or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the Battery and increase the risk of fire.

26. Never service damaged Battery. Service of Battery should only be performed by the manufacturer or authorised service providers.
27. Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.
28. Do not use Cordless Hand Mixer in rain or wet conditions. Do not expose to rain—store indoors.
29. Do not use the appliance for other than intended use.
30. Do not operate Hand Mixer continuously for more than 5 minutes.
31. Empty Batteries should be removed from the appliance and safely disposed.
32. If the appliance is stored for a long period, the Batteries should be removed.
33. If the Battery leaks, remove the Battery from the appliance and do not use the Battery again.
34. Rechargeable Batteries are to be removed from the appliance before being charged.
35. **IMPORTANT:** Use only with approved USB Adapter by market.
36. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farmhouses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

SAVE THESE INSTRUCTIONS

For complete details on product information, instructions and videos, including Guarantee information, visit

www.kitchenaid.com.au or www.KitchenAid.co.nz.

ELECTRICAL REQUIREMENT

USB Adapter:

Input: 100–240 V~, 50–60 Hz, 0.5 A

USB Output: 5 VDC, 2 A

Recommended ambient charging temperature: 5-40°C

External Battery (Lithium-ion): 5KRB12A

Nominal Voltage: 10.8 VDC

Maximum Voltage: 12 VDC

NOTE: If the adapter does not fit fully in the outlet, contact a qualified electrician. Do not modify the adapter in any way.

Do not use or store Battery or products in locations where the temperature is less than 10°C or more than 40°C.

LITHIUM-ION BATTERY OPERATED PRODUCT DISPOSAL

Always dispose the Battery operated products according to federal, state, and local regulations. Contact a recycling agency in your area for recycling locations.

GETTING STARTED

BEFORE FIRST USE

1. Charge the Battery until it is fully charged.
2. Clean all the parts and accessories (see “Care and Cleaning” section).
3. Remove all packaging materials, if present.

NOTE: Some dust may be on the product. This is due to the recycled materials used in packaging. This can be cleaned with a soft towel.

BATTERY CHARGING

USING THE USB CABLE

1. Attach the USB Cable to the adapter. Connect the other end of the USB Cable to the Battery.
2. Plug the adapter into a power source.

PRODUCT ASSEMBLY

1. **IMPORTANT:** Make sure that the Speed Controller is at “O” position before attaching and removing Stainless Steel Turbo Beater II accessories.
2. There are two Stainless Steel Turbo Beater II accessories. One is without a collar and another with a collar.
3. Insert the Stainless Steel Turbo Beater II accessories without a collar into the smaller opening and Stainless Steel Turbo Beater II accessories with a collar into the larger opening. Align and push to lock into place. Both the Stainless Steel Turbo Beater II accessories will click in.

PRODUCT USAGE

NOTE: Make sure the Battery is fully charged before use.

1. Insert the Battery into the Battery slot located at the back of the appliance.
2. The LED will light and display the Battery level for five seconds, then turn off.

3. Always start mixing at the lowest speed, and by sliding the Speed Controller, increase the speed according to the recipes.
4. To increase the speed, slide the Speed Controller forward (↑). To decrease the speed, slide the Speed Controller backward (↓).
5. When finished, slide the Speed Controller to “O” position.
6. Press and hold the Battery Unlock Button to remove the Battery.

CARE AND CLEANING

IMPORTANT: Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.

IMPORTANT: Make sure the Speed Controller is at “O” position before attaching or removing Stainless Steel Turbo Beater II accessories. Remove the Battery before cleaning.

1. Press the Eject Button to release the Stainless Steel Turbo Beater II accessories from the Cordless Hand Mixer.
2. Always remove the Stainless Steel Turbo Beater II accessories from the Cordless Hand Mixer before cleaning. The beaters can be washed in the dishwasher or by hand in warm, soapy water. Rinse and wipe dry.
3. Wipe the Cordless Hand Mixer with a damp cloth. Dry with a soft cloth.

NOTE: To avoid damage to the Cordless Hand Mixer, do not immerse in water.

FOR DETAILED INFORMATION ABOUT THE CORDLESS HAND MIXER:

Visit www.kitchenaid.com/quickstart for additional instructions with videos, inspiring recipes, and tips on how to use and clean your Cordless Hand Mixer.

ELECTRICAL EQUIPMENT WASTE DISPOSAL

DISPOSAL OF PACKING MATERIAL

The packing material is recyclable and is marked with the recycle symbol . The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

RECYCLING THE PRODUCT

- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

CUSTOMER SERVICE

In Australia:

For any questions, or to find the nearest Authorised KitchenAid Service Centre, please find our contact details below.

NOTE: All service should be handled locally by an Authorised KitchenAid Service Centre.

Toll free number: 1-800-990-990

Phone number: 0249026500

Address Australia: KitchenAid Australia Pty Ltd

6-8 Billbrooke Close

Cameron Park NSW 2285, Australia

Phone: 1-800-990-990

Mobile: 0249026500

Email: enquiries@KitchenAid.com.au

In New Zealand:

Website: www.KitchenAid.co.nz

Email: enquiries@KitchenAid.co.nz

Phone: 0800 881 200

In other countries:

For all product related questions and after-sales matters, please contact your dealer to obtain the name of the nearest Authorised KitchenAid Service/Customer Centre.

For complete details on product information, instructions and videos, including Guarantee information, For more information, visit our website at: www.KitchenAid.com.au.

KitchenAid

©2023 All rights reserved.